


USE COPPER CONDUCTORS ONLY. USE THIS EQUIPMENT ON A GROUNDING SYSTEM ONLY. USE MINIMUM 75°C WIRE FOR AMPACITY DETERMINATION. INTERNAL MOTOR PROTECTION-ALLOW TIME FOR RESET. OVERCURRENT PROTECTION DEVICE RATING AND TYPE MUST BE IN ACCORDANCE WITH REGULATORY AGENCY END PRODUCT APPROVALS-SEE SYSTEM NAMEPLATE.

XX

005-0788-00

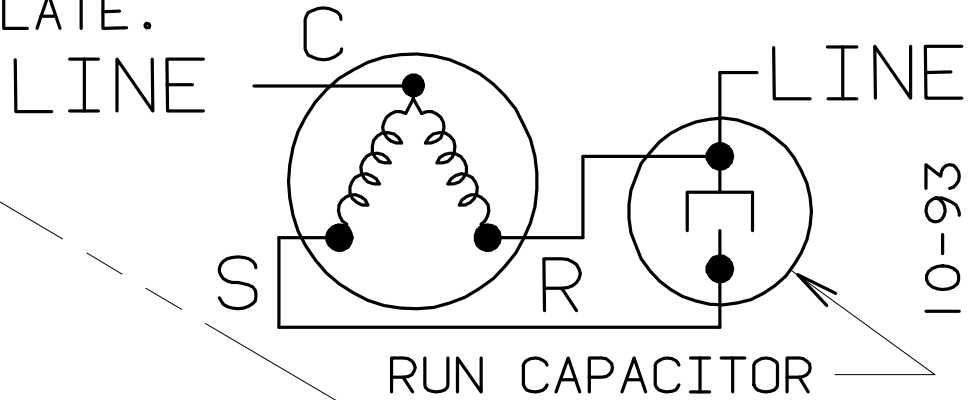

10-93

Wiring Diagram 005-0788-00