

## TW Series Installation Instructions



This device is for use on a flat, smooth surface of a NEMA type 4 or 13 enclosure.





**WARNING:** To prevent injury, this device must be disconnected from all power sources prior to initiating work.

**CAUTION:** When installing in a metal enclosure, maintain a ½" (12.7mm) min. clearance between exposed metal parts of contact and enclosure.


### Installation

1. Place the unit (less mushroom head and mounting ring) through panel hole from backside of panel.
2. Optional : Install anti-rotation ring washer (OGL-31) on front side of panel.
3. Install and tighten mounting ring. (45 in-lb)
4. Install and tighten mushroom head. (15 in-lb)

### Panel Thickness Adjustment

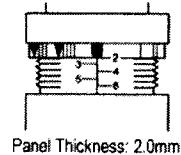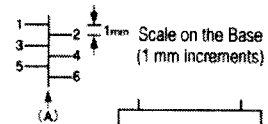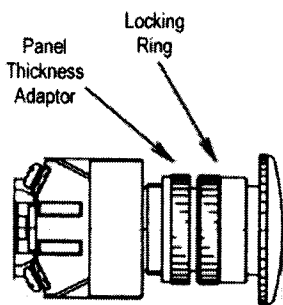

Panel Thickness: 2.0mm

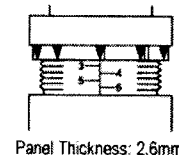

Panel Thickness: 2.6mm

### Panel Cutout

